


Operating Instructions of the Midi-Heki roof light with operating bar / with crank / electrical version

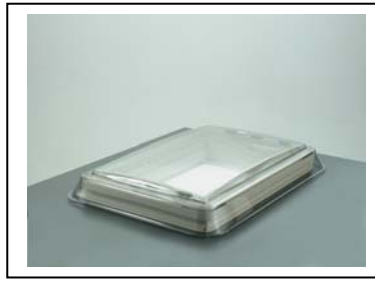

Version with operating bar:

Opening the dome:




Intermediate position of the dome:

By pushing the bar into the marked rest position ●, two extra opening angles, apart from the one in which the dome is fully opened, can be chosen.



Closing the dome:

(Drive and rest position)

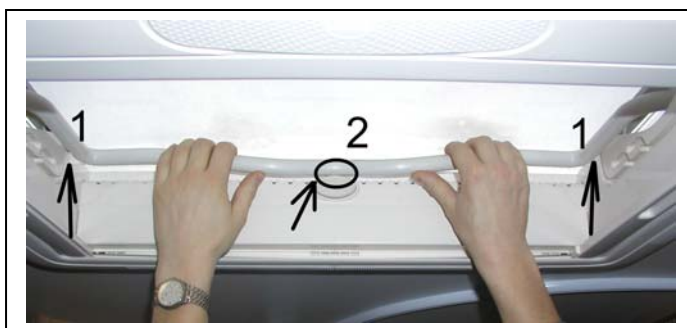

Push the bar with both hands on the right and the left side in such a way that the hook bolt (1) the dome on the left and the right side and the bar lies on the push button (2). Check if the dome is locked.


Version with crank:

Opening the dome:



Turn the crank only until a resistance is noticeable during opening.

Closing the dome:

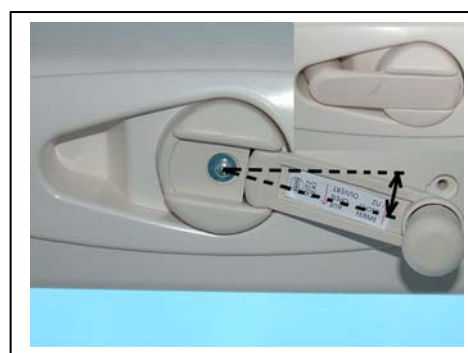

Turn the crank only until a resistance is noticeable during closing. Before throwing the crank a slight tension has to occur. Check the locking by lifting up the dome with the hand.

Electrical version:

Opening the dome:



Push the button so long that the desired position is reached or the electrical motor switches off.

Closing the dome:

Push the button so long that the electrical motor switches off by itself. Check the locking by lifting up the dome with the hand.

Opening/closing the blind and fly net:

Pull the end rod from the recessed part and push it in a position you desire.
(Both systems are adjustable in any positions and can be used independently from each other.)



Safety instructions:

- Repairs should be carried out only by trained personnel.
- Inform an approved dealer in case of defects and malfunctions.
- Before starting off, check the roof light for damage in the dome (tension cracks) and the opening mechanism which could arise owing to, for example, branches and other natural causes.
- Do not step on the dome.
- Do not leave the vehicle without closing the roof light (danger of burglary, water penetration and wind).
- Do not open in strong wind, rain or snowfall.
- Before opening, remove snow, ice, dirt etc. from the dome.
- Malfunctions are to be repaired by an approved dealer at once.
- Do not use caustic detergents (danger of tension cracks in the dome).
- Before setting off close the dome and check the locking mechanism.
- Avoid high speed (maximum speed recommended is 130km/h)
- Do not close the blind more than 2/3 during the day (danger of heat accumulation).
- Before starting off open the blind.
- The function of the ventilation (optional) is only ensured if the gap between vehicle roof and dome is free of snow and dirt
- The protection foil on the dome is not weatherproof and has to be removed after installation.

Care instructions:

- Clean the dome with the Seitz acrylic cleaner.
- Opaque spots and light scratches on the dome can be removed with the Seitz Acrylic Polish and the Seitz Special Polishing cloth.
- Use talcum powder regularly (4 times yearly) to care for the rubber seals.
- Clean the blinds only with water and mild soap suds or a vacuum cleaner.

The guarantee becomes null and void if the care and safety instructions are not followed.